




NUDY BEAUTY

www.cmdekorea.com
+82 10-4115-4414
nudybeauty@naver.com

NUDY
White LED

Intro

The world's first
and only
eyelash extension system
that cures
with white light

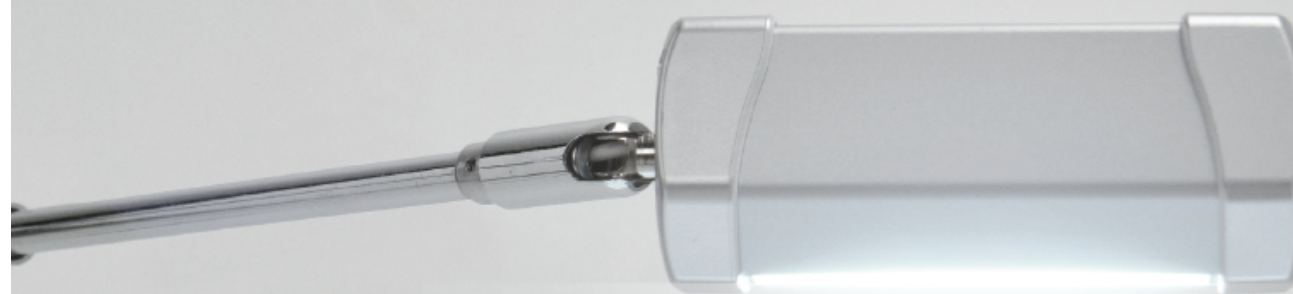

NUDY
White LED

Only

World's first and only safe eyelash procedure possible
with Non-UV white lamp

Safe

World's first use of eyelash-specific light-curing adhesive
that doesn't detect carcinogenic MMA

White

Convenient procedure possible with highly visible white light

Why, White LED

Advantages of LED eyelash extensions

1



Non-UV

Non-UV lamp can be used even by those sensitive to UV exposure or with allergies.

2



Passed photobiological certification

Developed by a beauty device LED mask company, it has completed photobiological certification tests, allowing for worry-free procedures.

3



High visibility


The bright white light makes the client's eyelashes clearly visible, making the procedure very convenient.

4



**Reduced curling!
Improved retention!**

Higher retention leads to shorter procedure intervals, and reduced curling results in longer-lasting design shapes without distortion, increasing client satisfaction.

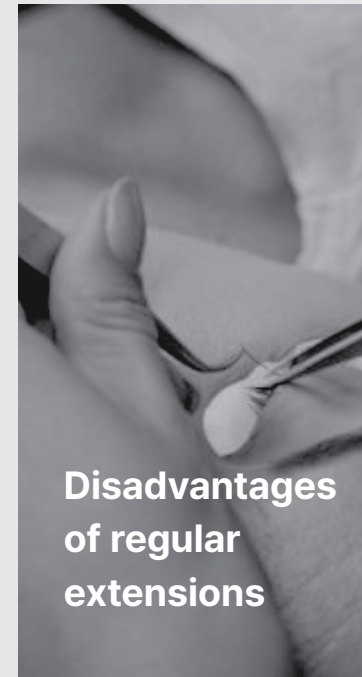

**Disadvantages
of regular
extensions**

1. Moisture-curing glue


Because the glue cures due to moisture in the air, retention and procedure difficulty vary with changing external environments.

2. Eye irritation

The longer the curing time, the more gas is continuously produced, irritating the client's eyes.

3. Retention

After a certain period post-procedure, curling and shedding of natural and artificial lashes occur.

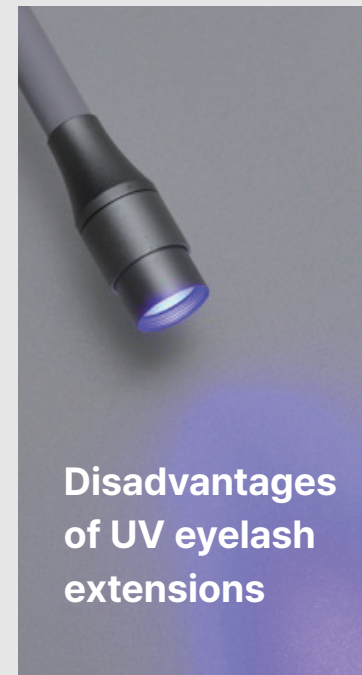

**Disadvantages
of UV eyelash
extensions**

1. Skin moisture loss

During the process of curing the glue with a UV lamp, blue light causes skin moisture loss.

2. Ultraviolet rays

Direct exposure of ultraviolet rays from blue light to the client's skin makes the procedure impossible for those sensitive to sunlight allergies or UV exposure.

3. Low visibility

Blue light is dark, making it difficult to see the client's eyelashes clearly during the procedure.

Information of Product


Lamp

POINT. 01

World's first White LED eyelash extension lamp
White light increases visibility and decreases fatigue.


SPEC

Power Consumption	8W
Input voltage	24v
Luminous flux	420lm
CCT	6500K
CRI	83
Adapter	24V 1A
Purpose of use	Hardening of eyelash glue
Origin	Korea

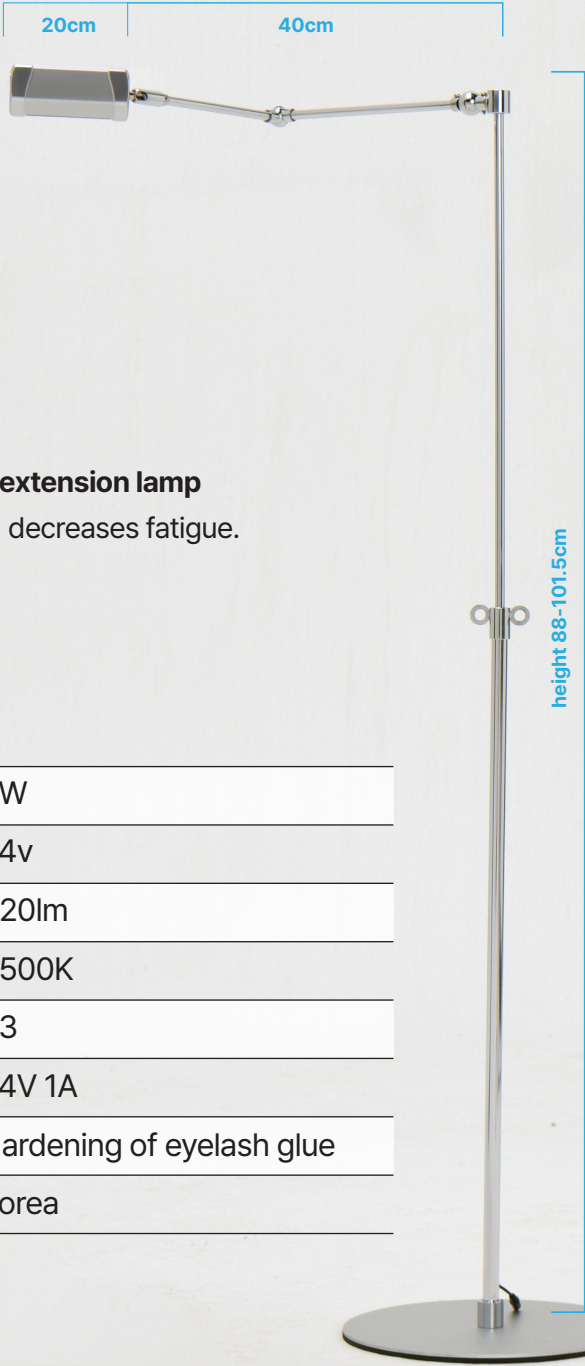


POINT. 02

270-degree rotating
double-joint structure
Free angle adjustment
regardless of the worker's
location.

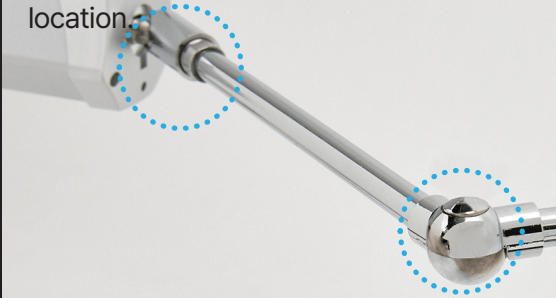


POINT. 03

Height adjustment
function
Free height adjustment
possible according to the
treatment bed.

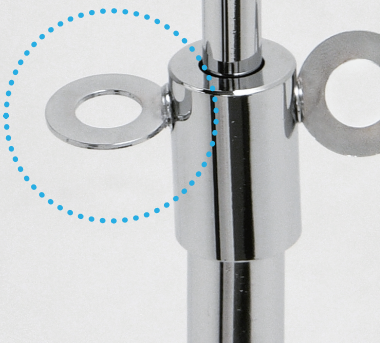

POINT. 04

Perfect heat dissipation design
Safe treatment possible with perfect
heat dissipation design that doesn't rise
above a certain temperature and
quickly cools down.

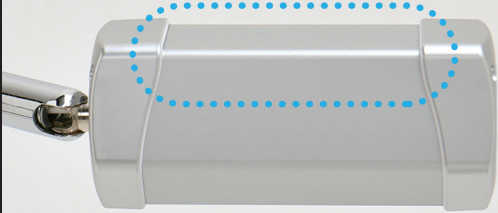

POINT. 05

Mouse-type foot pedal
Soft touch that doesn't
strain the ankle.



Information of Product

Glue

VIS Incyano Clear

Transparent color
Glue for clean extensions
MMA (Methyl Methacrylate)
Free Glue.


Products: 1, 3, 5, 7, 9



VIS Incyano Black

Black color Glue
with easy control of amount
MMA (Methyl Methacrylate)
Free Glue.

Products: 2, 4, 6, 8

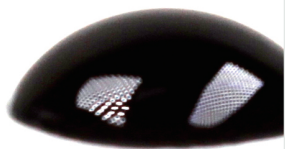

VIS Glue

VIS Incyano Clear



SPEC

VIS 1
Curing time 7-8 Sec.
Viscosity high



SPEC

VIS 3
Curing time 5-6 Sec.
Viscosity high



SPEC

VIS 5
Curing time 3 Sec.
Viscosity high



SPEC

VIS 7
Curing time 1-2 Sec.
Viscosity low



SPEC

VIS 9
Curing time 2 Sec.
Viscosity medium

VIS Incyano Black



SPEC

VIS 2
Curing time 4-5 Sec.
Viscosity medium



SPEC

VIS 4
Curing time 3 Sec.
Viscosity high



SPEC

VIS 6
Curing time 1-2 Sec.
Viscosity low



SPEC

VIS 8
Curing time 2 Sec.
Viscosity medium

Information of Product

Other LED glue products

LED-specific remover 15 g



Remover that cleanly removes glue and glue residue.

Pre-treatment solution (= Protein remover)



Pump type(300 ml) that allows you to use the desired amount.

Pad type(70 sheets) that can be used conveniently without additional tools.


Pre-treatment solution that improves adhesion between glue and natural lashes by removing protein floating on natural lashes and around eyes before the procedure. Low-irritation pre-treatment solution without alcohol that reduces whitening of the glue.

Glue protector 80X80 mm



Prevents glue from shortening setting time or curing due to wide white light Glue protector.


Black turban 300X80 mm

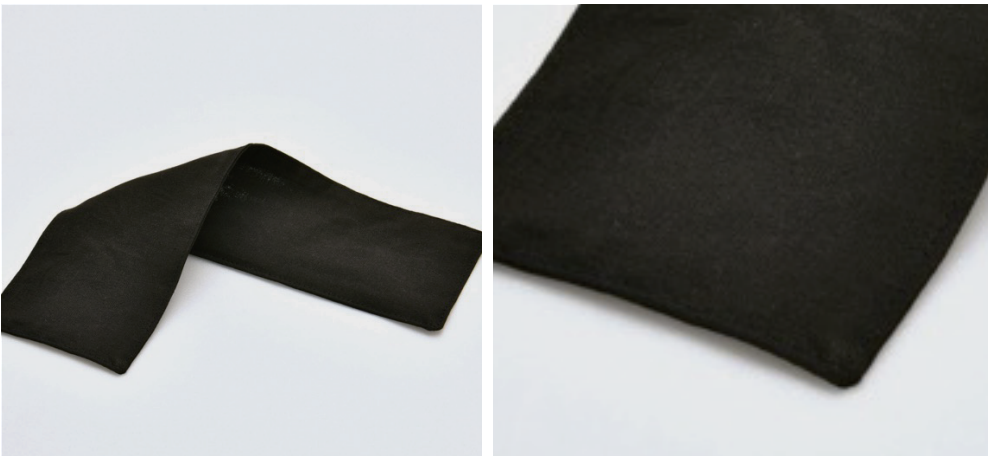


Black turban that reduces eye fatigue for the technician by reducing light reflection.

Information of Product


How to use

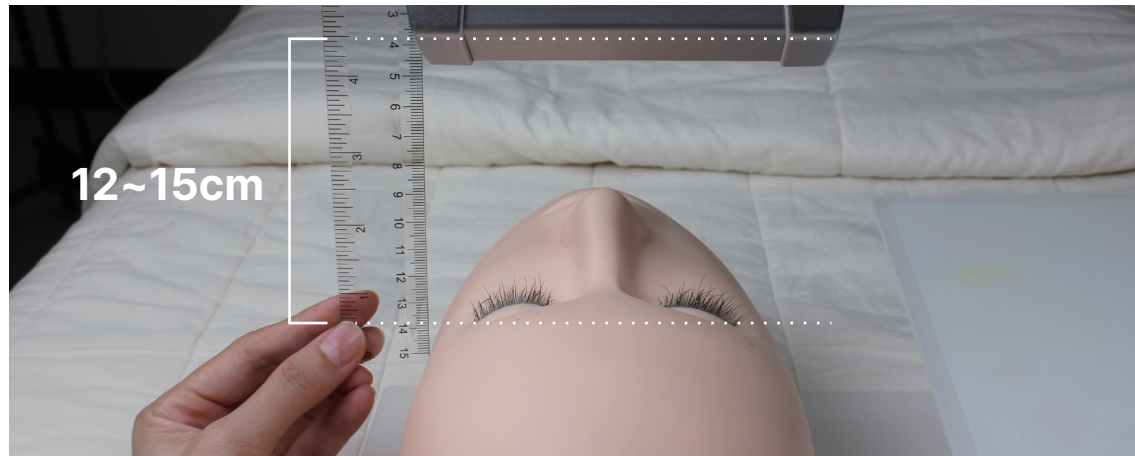


Step01 First, adjust the distance between the eyelid and the light to 12-15cm. Measure from the top of the LED light to the eyelid.

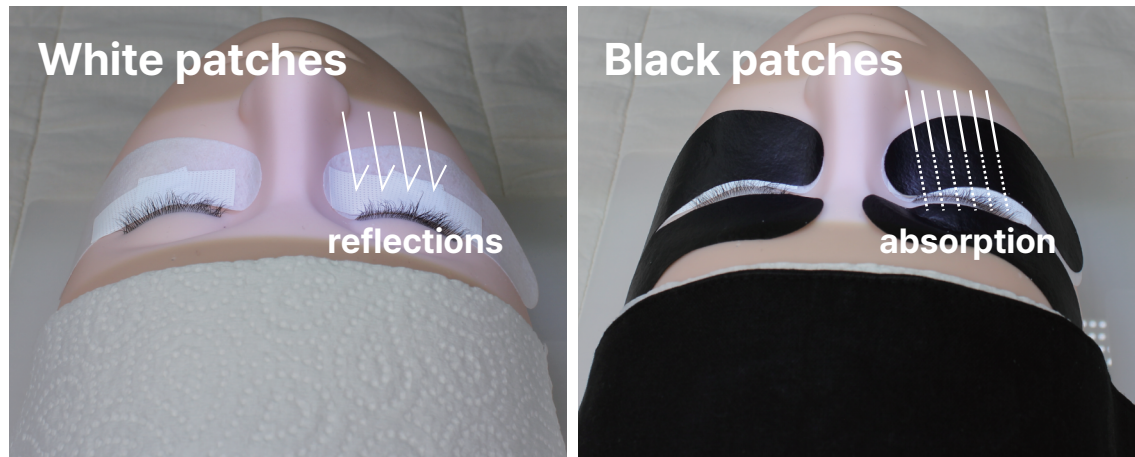


Step02 After completing taping as usual, place a black eye patch and turban on top to prevent glare. Tape the client's eyelids to prevent their eyes from opening.

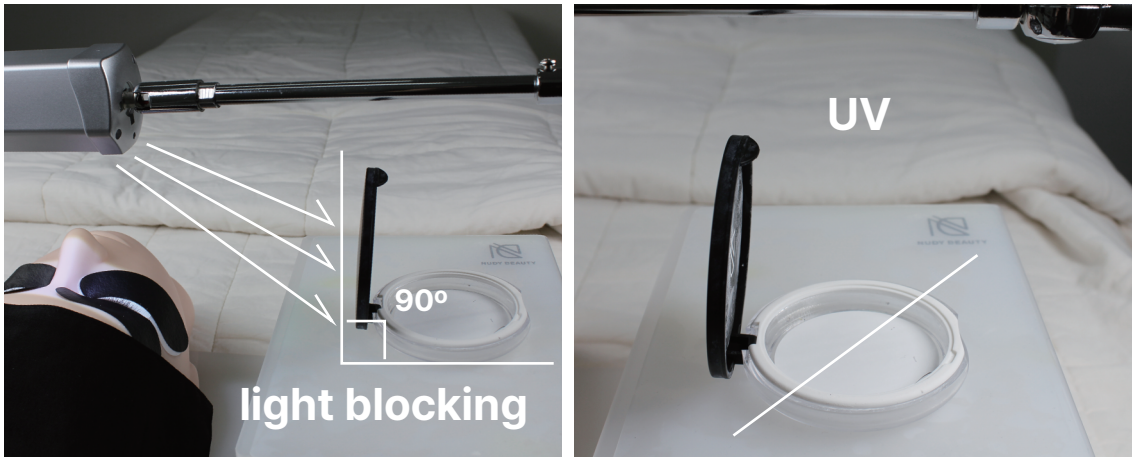

Step03 Place the glue protector's lid facing away from the light and stand it vertically on the surface. Ensure that not only the white light but also UV rays from windows don't reach the plate where the glue is dispensed.

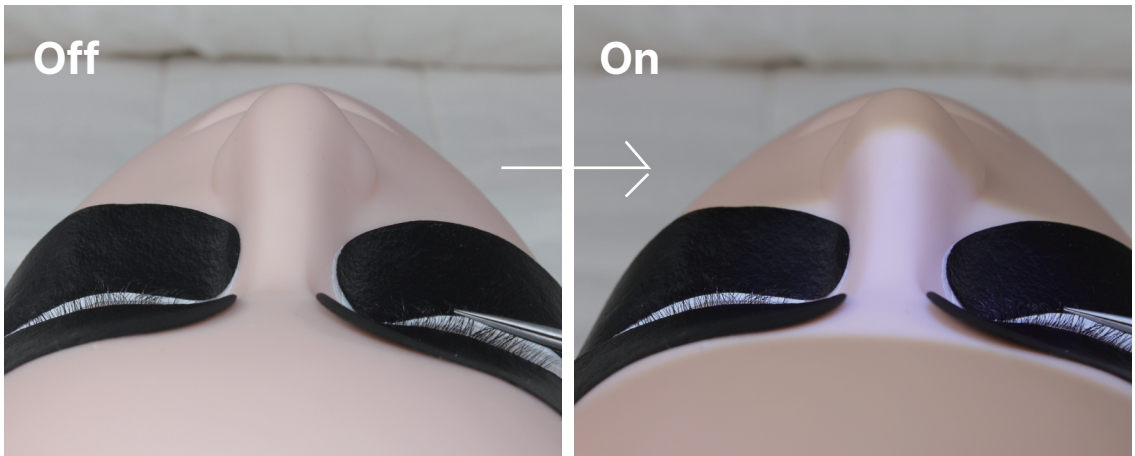

Step04 Turn on the light when the artificial lash with glue has been attached to the natural lash. If the light is turned on before attaching the artificial lash, only the surface of the glue may cure, reducing adhesion.

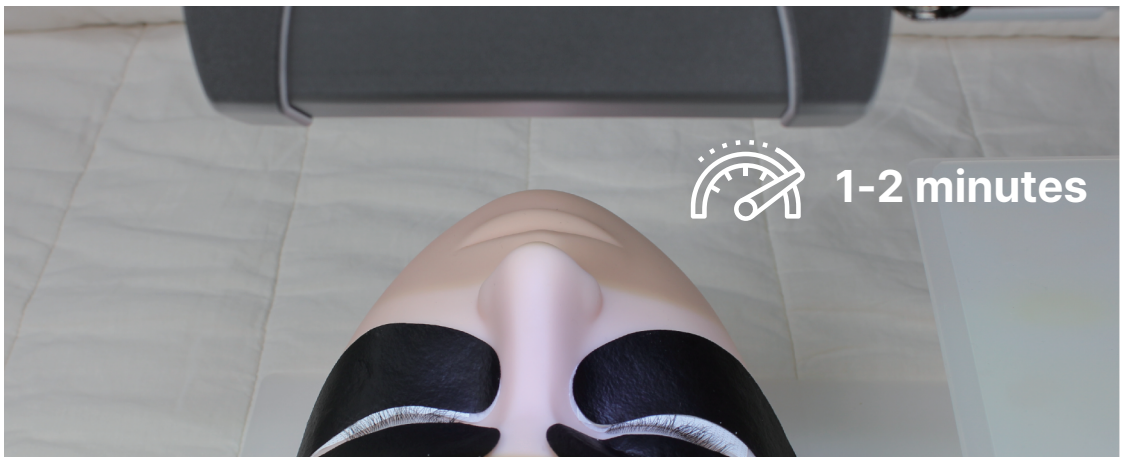

Step05 For the strength of the glue, it is irradiated for about 1-2 minutes as a finishing touch.

Certification status

Certification status



OEM
a company that produces complex equipment from components usually bought from other manufacturers.

ODM
a company that has the capabilities to design, develop, manufacture and sell products themselves.

Brand
How to order and purchase Nudy beauty brand products.

In OEM & ODM way, you can purchase NUDY Brand products only for exports.
In Korea, you can purchase NUDY Brand products only through CMDE KOREA.